

AT91SAM7S Microcontroller Series Schematic Check List

1. Introduction

This application note is a schematic review check list for systems embedding Atmel's AT91SAM7S series of ARM® Thumb®-based microcontrollers.

It gives requirements concerning the different pin connections that must be considered before starting any new board design and describes the minimum hardware resources required to quickly develop an application with the AT91SAM7S Series. It does not consider PCB layout constraints.

It also gives advice regarding low-power design constraints to minimize power consumption.

This application note is not intended to be exhaustive. Its objective is to cover as many configurations of use as possible.

The Check List table has a column reserved for reviewing designers to verify the line item has been checked.



AT91 ARM Thumb-based Microcontrollers

Application Note

2. Associated Documentation


Before going further into this application note, it is strongly recommended to check the latest documents for the [AT91SAM7S](#) Series Microcontrollers on Atmel's Web site.

[Table 2-1](#) gives the associated documentation needed to support full understanding of this application note.

Table 2-1. Associated Documentation

Information	Document Title
User Manual Electrical/Mechanical Characteristics Ordering Information Errata	AT91SAM7S Series Product Datasheet
Internal architecture of processor ARM/Thumb instruction sets Embedded in-circuit-emulator	ARM7TDMI® Datasheet
Evaluation Kit User Guide	AT91SAM7S-EK Evaluation Board User Guide


3. Schematic Check List

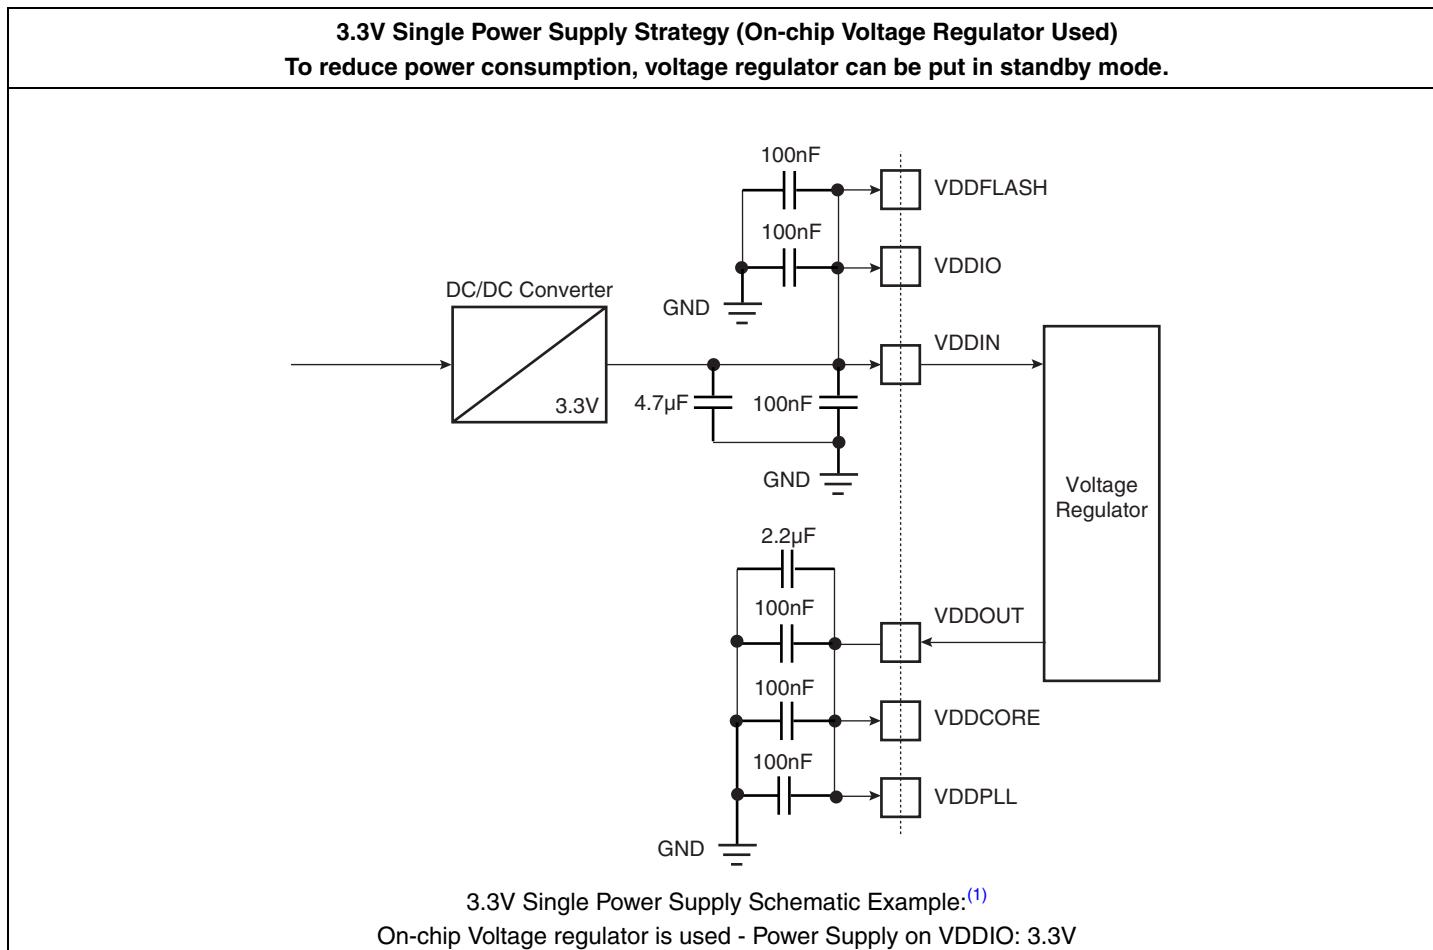

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDIN	3.0V to 3.6V Decoupling/Filtering capacitors (100 nF and 4.7 μ F) ⁽¹⁾⁽²⁾	Powers on-chip voltage regulator and ADC. Decoupling/Filtering capacitors must be added to improve startup stability and reduce source voltage drop. $V_{VDDIN\ SLOPE}\ (T_{SLOPE})$ must be superior or equal to 6V/ms.
	VDDOUT	Decoupling/Filtering capacitors (100 nF and 2.2 μ F) ⁽¹⁾⁽²⁾	Output of the on-chip 1.8V voltage regulator. Decoupling/Filtering capacitors must be added to guarantee 1.8V stability
	VDDIO	3.0V to 3.6V or 1.65 to 1.95V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers I/O lines and USB transceivers Dual voltage range supported. Note that supplying less than 3.0V to VDDIO prevents any use of the USB transceivers.

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDFLASH	3.0V to 3.6V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers Flash (charge pump).
	VDDCORE	1.65 to 1.95V Can be connected directly to VDDOUT pin. Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers device and flash logic, on-chip RC.
	VDDPLL	1.65 to 1.95V Can be connected directly to VDDOUT pin. Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers the main oscillator and the PLL.
	GND	Ground	No separate ground pins are provided for the different power supplies. Only GND pins are provided and should be connected as shortly as possible to the system ground plane.

3.3V and 1.8V Dual Power Supply Strategy (On-chip Voltage Regulator NOT Used and ADC Used)
To reduce power consumption, voltage regulator can be put in standby mode.

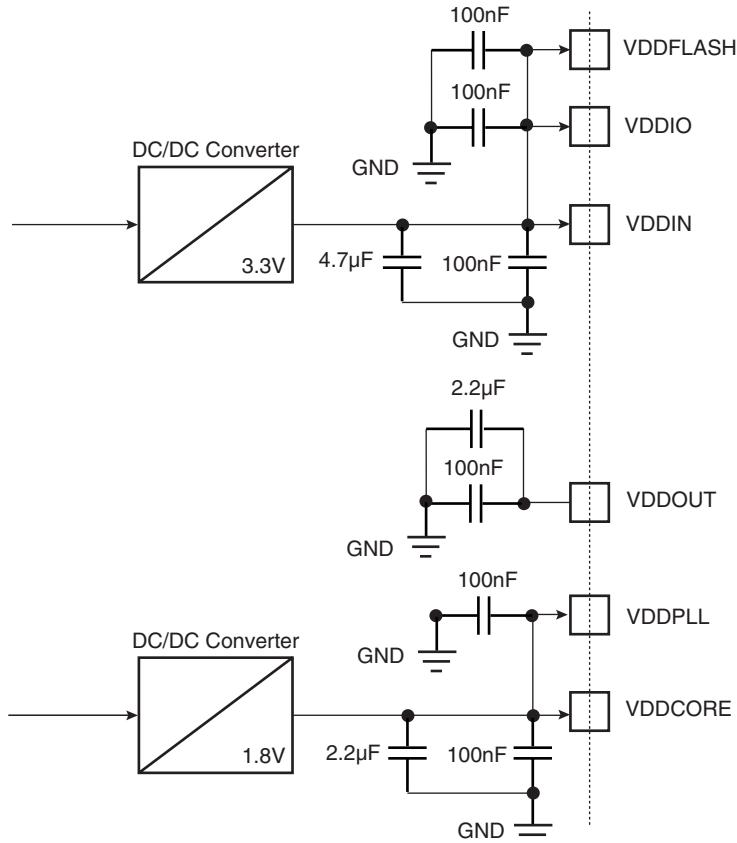


3.3V and 1.8V Dual Power Supply Schematic Example:⁽¹⁾
 On-chip Voltage regulator is not used - ADC is used - Power Supply on VDDIO: 3.3V

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDIN	3.0V to 3.6V Decoupling/Filtering capacitors (100 nF and 4.7 μF) ⁽¹⁾⁽²⁾	Powers ADC. Decoupling/Filtering capacitors must be added to improve startup stability and reduce source voltage drop.
	VDDOUT	Decoupling/Filtering capacitors (100 nF and 2.2 μF) ⁽¹⁾⁽²⁾	Output of the on-chip 1.8V voltage regulator. Decoupling/Filtering capacitors must be added to prevent on-chip voltage regulator oscillations.
	VDDIO	3.0V to 3.6V or 1.65 to 1.95V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers I/O lines and USB transceivers Dual voltage range supported. Note that supplying less than 3.0V to VDDIO prevents any use of the USB transceivers.

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDFLASH	3.0V to 3.6V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers Flash. $V_{VDDFLASH}$ must always be superior or equal to $V_{VDDCORE}$.
	VDDCORE	1.65 to 1.95V Decoupling/Filtering capacitors (100 nF and 2.2 μ F) ⁽¹⁾⁽²⁾	Powers device logic, on-chip RC and Flash. Decoupling/Filtering capacitors must be added to improve startup stability and reduce source voltage drop. $V_{VDDCORE\ SLOPE} (T_{SLOPE})$ must be superior or equal to 6V/ms.
	VDDPLL	1.65 to 1.95V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers the main oscillator and the PLL.
	GND	Ground	No separate ground pins are provided for the different power supplies. Only GND pins are provided and should be connected as shortly as possible to the system ground plane.

3.3V and 1.8V Dual Power Supply Strategy (On-chip Voltage Regulator and ADC NOT Used)

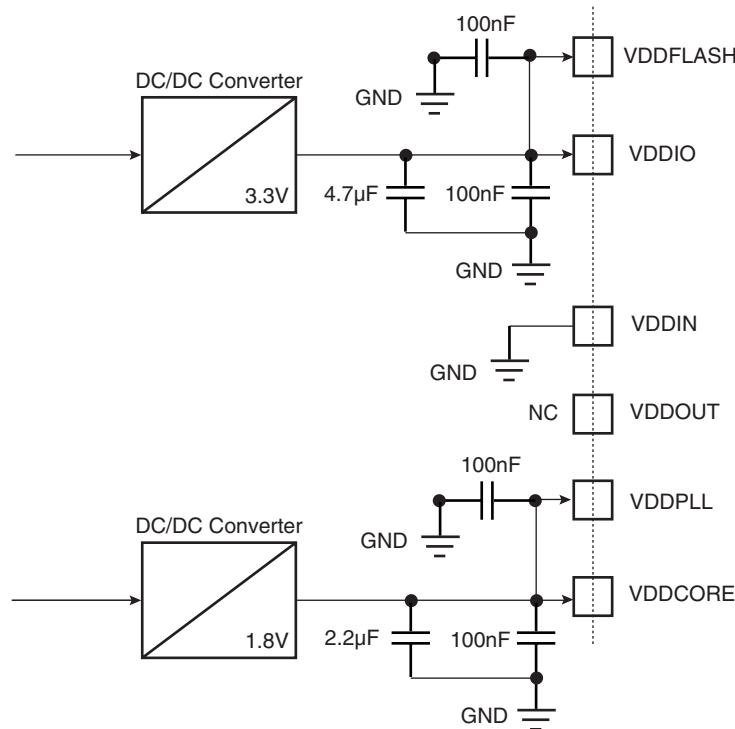



3.3V and 1.8V Dual Power Supply Schematic Example:⁽¹⁾

On-chip Voltage regulator is not used - ADC is not used - Power Supply on VDDIO: 3.3V

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDIN	Connected to GND.	-
	VDDOUT	Can be left unconnected.	-
	VDDIO	3.0V to 3.6V or 1.65 to 1.95V Decoupling/Filtering capacitors (100 nF and 4.7μF) ⁽¹⁾⁽²⁾	Powers I/O lines and USB transceivers Dual voltage range supported. Decoupling/Filtering capacitors must be added to improve startup stability and reduce source voltage drop. Note that supplying less than 3.0V to VDDIO prevents any use of the USB transceivers.
	VDDFLASH	3.0V to 3.6V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers Flash. $V_{VDDFLASH}$ must always be superior or equal to $V_{VDDCORE}$.

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	VDDCORE	1.65 to 1.95V Decoupling/Filtering capacitors (100 nF and 2.2 μ F) ⁽¹⁾⁽²⁾	Powers device logic, on-chip RC and Flash. Decoupling/Filtering capacitors must be added to improve startup stability and reduce source voltage drop. $V_{VDDCORE\ SLOPE}\ (T_{SLOPE})$ must be superior or equal to 6V/ms.
	VDDPLL	1.65 to 1.95V Decoupling capacitor (100 nF) ⁽¹⁾⁽²⁾	Powers the main oscillator and the PLL.
	GND	Ground	No separate ground pins are provided for the different power supplies. Only GND pins are provided and should be connected as shortly as possible to the system ground plane.

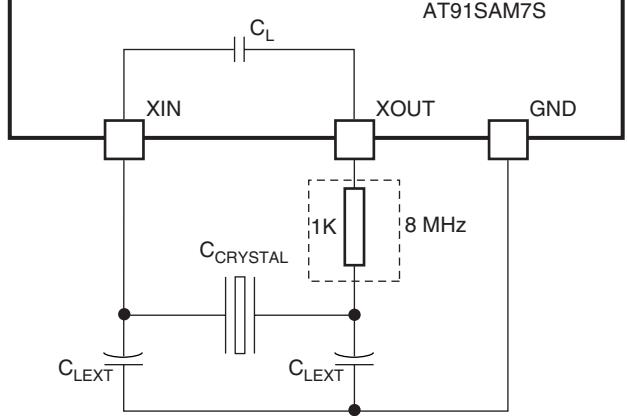
<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
Clock, Oscillator and PLL			
	XIN XOUT Main Oscillator in Normal Mode	<p>Crystals between 3 and 20 MHz</p> <p>Capacitors on XIN and XOUT (crystal load capacitance dependant)</p> <p>1 kOhm resistor on XOUT only required for crystals with frequencies lower than 8 MHz.</p>	<p>Internal Equivalent Load Capacitance (C_L): $C_L = 20 \text{ pF}$</p> <p>Crystal Load Capacitance to check ($C_{CRYSTAL}$).</p>  <p>Example: for an 18.432MHz crystal with a load capacitance of $C_{CRYSTAL} = 20 \text{ pF}$, no external capacitors (C_{LEXT}) are required ($C_{CRYSTAL} = C_L$)</p> <p>Refer to the electrical specifications of the AT91SAM7S datasheet.</p>
	XIN XOUT Main Oscillator in Bypass Mode	<p>XIN: external clock source</p> <p>XOUT: can be left unconnected</p>	<p>1.8V Square wave signal (VDDPLL)</p> <p>External Clock Source up to 50 MHz</p> <p>Duty Cycle: 40 to 60%</p>
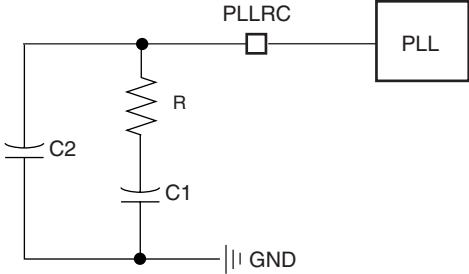
<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
	PLLRC	<p>Second-order filter</p> <p>Can be left unconnected if PLL not used.</p>	<p>See the Excel spreadsheet: "ATMEL_PLL_LFT_Filter_CALCULATOR_AT91_xxx.zip" (available in the software files on the Atmel Web site) allowing calculation of the best R-C1-C2 component values for the PLL Loop Back Filter.</p>  <p>R, C1 and C2 must be placed as close as possible to the pins.</p>

<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
ICE and JTAG⁽³⁾			
	TCK	Pull-up (100 kOhm) ⁽¹⁾	No internal pull-up resistor.
	TMS	Pull-up (100 kOhm) ⁽¹⁾	No internal pull-up resistor.
	TDI	Pull-up (100 kOhm) ⁽¹⁾	No internal pull-up resistor.
	TD0	Floating	-
	JTAGSEL	<p>Can be left unconnected for normal operations.</p> <p>It is strongly recommended to tie this pin to GND in harsh⁽⁴⁾ environments.</p> <p>Must be tied to V_{VDDIO} to enter JTAG Boundary Scan.</p>	<p>Internal pull-down resistor (15 kOhm).</p>
Flash Memory			
	ERASE	<p>Can be left unconnected for normal operations</p> <p>It is strongly recommended to tie this pin to GND in harsh⁽⁴⁾ environments.</p> <p>Must be tied to V_{VDDIO} to erase the General Purpose NVM bits (GPNVMx), the whole flash content and the security bit (SECURITY).</p>	<p>Internal pull-down resistor (15 kOhm).</p>
Reset/Test			
	NRST	Can be left unconnected	<p>NRST is configured as an output at power up.</p> <p>NRST is controlled by the Reset Controller (RSTC). An internal pull-up resistor to V_{VDDIO} (10 kOhm) is available for User Reset and External Reset control.</p>
	TST ⁽⁵⁾	<p>Can be left unconnected for normal operations</p> <p>It is strongly recommended to tie this pin to GND in harsh⁽⁴⁾ environments.</p> <p>Must be tied to V_{VDDIO} to enter Fast Flash Programming (FFPI) mode or SAM-BA™ Boot recovery mode⁽⁵⁾</p>	<p>Internal pull-down resistor (15 kOhm).</p>


<input checked="" type="checkbox"/>	Signal Name	Recommended Pin Connection	Description
PIO			
	PAx	Application Dependant	All PIOs are pulled-up inputs at reset and are 5V -tolerant. To reduce power consumption if not used, the concerned PIO can be configured as an output, driven at '0' with internal pull-up disabled.
ADC			
	ADVREF	2.6V to V_{VDDIN} . Decoupling capacitor(s).	ADVREF is a pure analog input. To reduce power consumption, if ADC is not used: connect ADVREF to GND.
	AD0 to AD7	0V to V_{ADVREF}	AD0 to AD3 are digital pulled-up inputs at reset. AD4 to AD7 are pure analog inputs. To reduce power consumption, if ADC is not used: connect AD4, AD5, AD6 and AD7 to GND.
USB Device (UDP)			
To reduce power consumption, USB Device Built-in Transceivers can be disabled (enabled by default).			
	DDP	Application Dependant. ⁽⁶⁾ Typically, 1.5 kOhm resistor to V_{VDDIO} .	No internal pull-up/pull-down resistors.. To reduce power consumption, if USB Device is not used, connect DDP to V_{VDDIO} .
	DDM	Application Dependant. ⁽⁶⁾	No internal pull-down resistor. To reduce power consumption, if USB Device is not used, connect DDM to GND.

Notes: 1. These values are given only as a typical example.
 2. Decoupling capacitors must be connected as close as possible to the microcontroller and on each concerned pin.

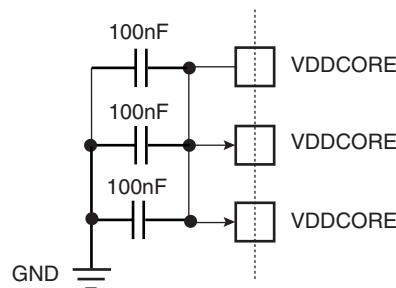

3. It is recommended to establish accessibility to a JTAG connector for debug in any case.
4. In a well-shielded environment subject to low magnetic and electric field interference, the pin may be left unconnected. In noisy environments, a connection to ground is recommended.
5. See: Test Pin description in I/O Lines Considerations section of the corresponding [AT91SAM7S](#) datasheet for more details on the different conditions to enter FFPI or SAM-BA Boot recovery modes.
6. Example of USB Device connection:
 As there is no embedded pull-up, an external circuitry can be added to enable and disable the pull-up.
 To prevent over consumption when the host is disconnected, an external pull-down can be added to DDP and DDM.

A termination serial resistor (R_{EXT}) must be connected to DDP and DDM. A recommended resistor value is defined in the electrical specifications of the [AT91SAM7S](#) datasheet.

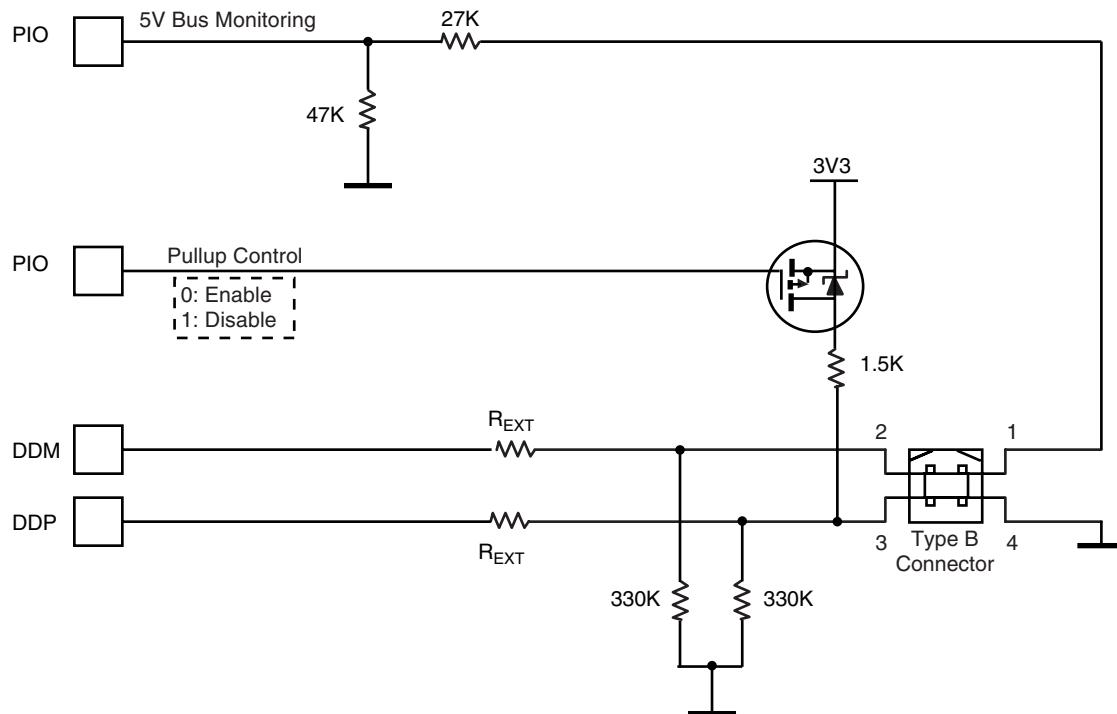

4. AT91SAM Boot Program Hardware Constraints

See the AT91SAM Boot Program section of the [AT91SAM7S](#) datasheet for more details on the boot program.

4.1 SAM-BA Boot

The SAM-BA™ Boot Assistant supports serial communication via the DBGU or the USB Device Port:

- DBGU Hardware Requirements: 3 to 20 MHz crystal or 1 to 50 MHz external clock.
- USB Device Hardware Requirements:
 - 18.432 MHz crystal.
 - PA16 dedicated to USB DDP Pull-up. When this PIO is driven low by SAM-BA Boot, the pull-up must be enabled.

Revision History

Doc. Rev	Comments	Change Request Ref.
6258A	First issue	
6258B	disclaimer added to “Introduction” on page 1.	3254
6258C	Section 3. "Schematic Check List" , Precisions added to schematics of power supply strategies. Note added for use in harsh environments. Precisions added to ADC and descriptions. PA16 use definition in Section 4.1 "SAM-BA Boot" , “Clock, Oscillator and PLL” on page 9, schematic updated.	3922



Atmel Corporation

2325 Orchard Parkway
San Jose, CA 95131, USA
Tel: 1(408) 441-0311
Fax: 1(408) 487-2600

Regional Headquarters

Europe

Atmel Sarl
Route des Arsenaux 41
Case Postale 80
CH-1705 Fribourg
Switzerland
Tel: (41) 26-426-5555
Fax: (41) 26-426-5500

Asia

Room 1219
Chinachem Golden Plaza
77 Mody Road Tsimshatsui
East Kowloon
Hong Kong
Tel: (852) 2721-9778
Fax: (852) 2722-1369

Japan

9F, Tonetsu Shinkawa Bldg.
1-24-8 Shinkawa
Chuo-ku, Tokyo 104-0033
Japan
Tel: (81) 3-3523-3551
Fax: (81) 3-3523-7581

Atmel Operations

Memory

2325 Orchard Parkway
San Jose, CA 95131, USA
Tel: 1(408) 441-0311
Fax: 1(408) 436-4314

Microcontrollers

2325 Orchard Parkway
San Jose, CA 95131, USA
Tel: 1(408) 441-0311
Fax: 1(408) 436-4314

La Chantrerie
BP 70602
44306 Nantes Cedex 3, France
Tel: (33) 2-40-18-18-18
Fax: (33) 2-40-18-19-60

ASIC/ASSP/Smart Cards

Zone Industrielle
13106 Rousset Cedex, France
Tel: (33) 4-42-53-60-00
Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd.
Colorado Springs, CO 80906, USA
Tel: 1(719) 576-3300
Fax: 1(719) 540-1759

Scottish Enterprise Technology Park
Maxwell Building
East Kilbride G75 0QR, Scotland
Tel: (44) 1355-803-000
Fax: (44) 1355-242-743

RF/Automotive

Theresienstrasse 2
Postfach 3535
74025 Heilbronn, Germany
Tel: (49) 71-31-67-0
Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd.
Colorado Springs, CO 80906, USA
Tel: 1(719) 576-3300
Fax: 1(719) 540-1759

Biometrics

Avenue de Rochepleine
BP 123
38521 Saint-Egreve Cedex, France
Tel: (33) 4-76-58-47-50
Fax: (33) 4-76-58-47-60

Literature Requests

www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN ATTEL'S TERMS AND CONDITIONS OF SALE LOCATED ON ATTEL'S WEB SITE, ATTEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATTEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATTEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.



© 2007 Atmel Corporation. All rights reserved. Atmel®, logo and combinations thereof, Everywhere You Are®, DataFlash® and others, are registered trademarks SAM-BA™ and others are trademarks of Atmel Corporation or its subsidiaries. ARM®, the ARM Powered® logo, Thumb® and ARM7TDMI® are registered trademarks of ARM Limited. Other terms and product names may be the trademarks of others.